

VCOSM	980	KTY004	288
VDI	861	KTY005	289
VDELONG	293-295	LG	600-609
VITE	296-299	LIANGYU	780
VKIRA	796-797	LIKEAIR	386-387
VLPIN	989-991,996	LITTLESWAN	453
VMOOR	501,508,509,532, 973,978,979	LONGHE	861
		LOREN-SEBO	801-803
VMICO	982	MOQUAY	790-795
VORKE	301-302	MEILING	388-391
VOLI	303	MIDEA	040-058
VPTON	862	MINGXING,BOYIN	290
VUCMA	210-229,933	MITSUBISHI	551-599
VUX	180-199	MITSUKA	904
VJXUE	299	NATIONAL/Panasonic	660-689
VJELINGJINGDIAN	304	NIKKO	610-611
VIG-THUMB	331	NISO	398-399,497
VOERKA	630,305-306	NORCA	994
VOERLER	307	OLYMPUS	995-996
VOHSI	310	OPAL	997
VOHSHIGAO	308-309	PANDA	464-466
VBLUE STAR	687	PEREG	998
VJIXING	311	PILOT	902
VJARRIER	690-699,890-899	PINSHANG,XINHUAABAO	290
VJHANGFENG	190	PUYI	862
VJHANGFU	835-838	QIXING	393
VJHANGHONG	059-079,934,947	RAYBO	371-383
VJHANGLING	312-323	RHOSS	903
VJHENGYUAN	324	RICAL	394
VJHIGO	083-099	RUIJIANG	395-397
VJHUANGHUA	325-328	ROWA	383-385
VJHUANYAN	861	SACON	414
VJHUNLAN	170-179	SAMSUNG	610-629
VJCOLROLLA	861	SANYONEC	500-550,860,943,946
VJONFROWA	337-341	SANZHUAN	190
VJONSUL	993	SAPORO	861
VJORONA	760-769	SAST	450-452
VJROWN	861	SENSOR	960
VJAEWOOD	332-333	SERENE	499
VJAIKIN	740-759	SHAMEI	400
VJAJINXING	329-330	SHANGLING	403-409
VJAKE	861	SHANXING	401-402
VJAJOTIAN	821-824	SHANYE	862
VJELONGHI	900	SHARP	720-730
VJONGXIA	334-335	SHENBAO	410-411
VJONGXINBAO	260-268	SHENGFENG	412
VJUNAN	336	SHENGFENGFEILU	413
VJLOO	986	SHINGO	200-209
VJLECTER	981-986	SHINING	415
VJLECTROLUX	471-474,807-808, 250,906	SHUJIANGLU	416-418,946
VJEDDERS	878	SIGMA	447
VJEDERICH	879	SOGG	291
VJEIGE	829-830	SONGLIXIA	862
VJEILU	240-249	SONGXING	419
VJERROLI	901	SOVA	292,420
VJERST	864	SOWA	862,863
VJRESTECH	270-279,944-945, 700-719	SOYEA	421-422
VJUNIKI	992	SPEED	987
VJALANZ	124-129,134-139, 936-940	SRTC	423
VJEER	342-343	STARIGHT-AIRCON	880
VJLEE	280	SUNBURG	817-820
VJOLDSTAR	303	TADIAN	501,508,509,532
VJREE	000,020-039	TADIRAN	501,508,509,532,630, 969,978,979,991
VJJIANGDA	345-346	TALY	862
VJUQIAO	344	TCL	120-133
VJAIER	001-019	TEAC	850-859
VJELTON	863	TECO	831-834
VJEMILTON	095	TIANJIKONGTIAO	424
VJICON	391-392	TIANYAN	425-428
VJISENSE	230-239	TOBO	250-269
VJITACHI	640-659	TONGI	429-430
VJONGYI	347	TOSHIA	630-639
VJLIABAO	100-109	TOYO	825-828
VJLIAGAO	348	TRANE	812-816
VJLUAKE	349-350	UNIAI	368-369
VJLUALING	150-169,045	UTTLBUCK	454-456
VJLJAMEI	351-352	VIDECON	884
VJLIANGHE	353	WANBO	431-433
VJLJLWAI	281	WANDI	861
VJLJIFENG	354-356,357,360	WEILI	434-443,553-576
VJLJUNDAI	780-789	WEITE	444
VJLYON	475-483	WHIRPOOL	770-774,739
VJLJALE	358	WUFEG	445-446
VJLIANGNAN	359	XILEN	445-449
VJLJBEIJING	361-362	XINGE	462-463
VJLJINDA	491-492	XINLE	457-460
VJLJINSONG	363-366	XINLIB	461
VJLJIMSTAR	380	XIONDI	862
VJLJHNSO	282	YAR	467,044,013-015
VJLJANGLI	368-370	YAOA	470
VJLJELONG	110-119	YIDOG	499
VJLJIMATAIR	797-800	YORF	775-779
VJLJONKA	366-367	YULU	949
VJLKRIS	804-805	ZHOYI	493-494
VKT02_D001	283	ZUOIN	495
VKT02_D002	284	ZIYI	044,090,092,095
VKTY001	285	OTHE	496-498,821-828,839-849, 866-877,905-976,999
VKTY002	286		
VKTY003	287		

English

UNIVERSAL A/C REMOTE CONTROL

Default Function

Product is available for: GREE (YBOF2), Mitsubishi 388, Midea, Toshiba, Chunlan, Haier, Huailing. If it's not working, please try to operate it with one of the methods below:

Setting Of The Remote Control

Brand point to point fast searching

Switch on the power of the air condition manually, align the remote control with the receiving window of the air condition.

Once press the CODE button until the air condition begins to automatically run with a voice of tick, and then release the button, and the setup is finished.

Button Brand Corresponding Table

ON/OFF	TEMP+	TEMP-	WIND
GREE/HAIER	MIDEA/TOSHIBA/CHANGHONG	SHARP/KELON	MITSUBISHI/OTHERS
MODE	M.SWING	A.SWING	TIME ON
LG/SAMSUNG	HITACHI/PANASONIC	SANYO/HISENSE	CHIGO/DAIKIN
TIME OFF	F.Cool FAST COOLING	F.Heat FAST HEATING	
FUJITSU/CARRIER	CHUNLAN/AUX	SHINCO/AUCMA	

Digital auto searching for the available type

Switch on the power of the air condition manually, align the remote control with the receiving window of the air condition.

Press and hold the "SET" button for 6 seconds until the type code has changed (+1), now it's in the mode of fast searching for the available type. Checking the status of your air condition and press "OK" button to finish the searching when the air condition starts automatically.

Check the function of the buttons whether working or not (except the TEMP+, TEMP-, TIME ON, TIME OFF, SET buttons). Press the "OK" button to finish if there is no problem and the code is effective, if not, press "SET" button to keep on searching.

Input the code manually

Switch on the power of the air condition manually, find out the type of your air condition and the first code from the code table. Take HAIER as an example.

Press and hold the "SET" button for about 3 seconds until the type code is flickering in the window, then press "TEMP+" button until the code you need is on the window and flickering, the air condition will start up if the code is right.

Press "OK" button and then the code of the type will stop flickering.

Check the function of the buttons on the remote control to make sure there is no problem. The setup is finished if there is no problem. If not, repeat the step 2-3.

Searching the code manually

Switch on the power of the air condition manually, align the remote control with the receiving window of the air condition.

Press and hold the "SET" button for about 3 seconds until the type code is flickering in the window, then press "TEMP+" button one time. Checking the status of your air condition and press "OK" button to finish the searching when the air condition starts automatically.

Restore to factory settings

Press the "SET" + "WIND" button at the same time and hold about 3 seconds to restore to factory settings.

- Some of the remote control have the functions below (refer to the panel of the remote control)

FAST COOLING, FAST HEATING button

air condition will be set to the cooling mode by pressing the "FAST COOL" button, the temperature is strong wind, automatic direction.

air condition will be set to the heating mode by pressing the "FAST HEAT" button, the temperature is strong wind, automatic direction.

In the mode of heating, press the "E A Heating" button to start the electrical heating function. This function is suitable for some models.

Set the CLOCK function

Press the "CLOCK" button (about 3 seconds) to go in the mode of clock setting and then the clock is being adjust the time by pressing the "TEMP" button and the "TEMP" button. Press the "CLOCK" button again to exit.

TIME ON/OFF function

Opposed with the original remote control timing function, the timing indicator light of the air condition will up after pressing the "TIME ON" or "TIME OFF" button, and it means that the air condition is working in timing status.

combination code has no timing function when it is switched on, please find the appropriate type according to the method (one of the A B C D) in instruction Manual.

TIME ON function of some types is only available in the shutdown mode.