

CODE

YGCOM	980	KTY004	288
YDC	289	KTY005	289
YDELONG	293-295	LG	600-609
YITE	296-299	LIANGYU	780
YKIRA	796-797	LIKEAIR	386-387
YLPIN	989-991,998	LITTLISWAN	453
YMCOR	501,508,509,532, 973,978,979	LONGHE	861
		LOREN-SEBO	801-803
YMICO	982	MOQUAY	790-795
YLOKE	301-302	MEILING	388-391
YLOJI	303	MIDEA	040-058
YLPON	862	MINGXING,BOYIN	290
YUCMA	210-229,933	MITSUBISHI	551-599
YUX	180-199	MITSUKA	904
YXUXUE	299	NATIONAL/Panasonic	660-689
YELINGJINGDIAN	304	NIKKO	610-611
YIG-THUMB	331	NISO	398-399,497
YIOERKA	630,305-306	NORCA	994
YIORLER	307	OLYMPUS	995-996
YIOSHI	310	OPAL	997
YIOSHIGAO	308-309	PANDA	464-466
YIUE STAR	687	PEREG	998
YJIXING	311	PILOT	902
YJAFRIER	690-699,890-899	PINSHANG,XINHUABAO	290
YJHANGFENG	190	RAYBO	371-383
YJHANGFU	835-838	QIXING	383
YJHANGHONG	059-079,934,947	RAYBO	371-383
YJHANGLING	312-323	RHOSS	903
YJHENGYUAN	324	RICAL	394
YJHIGO	080-099	RUIJANG	395-397
YJHUANGHUA	325-328	ROWA	383-385
YJHUYAN	861	SACON	414
YJHUNLAN	170-179	SAMSUNG	610-629
YJOLLA	861	SANYONEC	500-550,860,943,946
YJONROWA	337-341	SANZHUAN	190
YJONSUL	993	SAPORO	861
YJORONA	760-769	SAST	450-452
YJROWN	861	SENSOR	960
YJAEWOO	332-333	SERENE	499
YJAIKIN	740-759	SHAMEI	400
YJAJINXING	329-330	SHANGLING	403-409
YJAKE	861	SHANXING	401-402
YJAJOTIAN	821-824	SHANYE	862
YJELONGHI	900	SHARP	720-730
YJONGXIA	334-335	SHENBAO	410-411
YJONGXINBAO	260-268	SHENGFENG	412
YJUNAN	336	SHENGFENGFEILU	413
YJCOO	982	SHINCO	200-209
YJLECTER	981-986	SHINING	415
YJLECTROLUX	471-474,807-808, 250,906	SHUANGLU	416-418,946
YJEDDERS	878	SIGMA	447
YJEDRICH	879	SOGG	291
YJEIU	829-830	SONGLINXIA	862
YJEROLI	240-249	SONGXING	419
YJIRST	901	SOVA	292,420
YJESTECH	270-279,944-945, 700-719	SOWA	862-863
YJUNIKI	992	SOYEA	421-422
YJALANZ	124-129,134-139, 938-940	SPEED	987
YJEER	342-343	SRTC	423
YJLEE	280	STARIGHT-AIRCON	880
YJOLDSTAR	303	SUNBURG	817-820
YJREE	000,020-039	TADIAN	501,508,509,532
YJJIANGDA	345-346	TADIRAN	501,508,509,532,630, 969,978,979,991
YJUQIAO	344	TAIYA	862
YJAIER	001-019	TCL	120-133
YJELTON	863	TEC	850-859
YJEMILTON	085	TECO	831-834
YJICON	391-392	TIANLIKONGTIAO	424
YJISENSE	230-239	TIANYAN	425-428
YJITACHI	640-659	TOBO	250-269
YJONGYI	347	TONGI	429-430
YJLIABAO	100-109	TOSHIA	630-639
YJLIAGAO	348	TOYO	825-828
YJLUAKE	349-350	TRANE	812-816
YJLIJALING	150-169,045	UNIAI	385-389
YJLIJAMEI	351-352	UTTLBUCK	454-456
YJLIJANGHE	353	VIDECON	884
YJLIJAWEI	281	WANBO	431-433
YJLIJIFENG	354-356,357,360	WANGDI	861
YJLIYUNDAI	780-789	WEILI	434-443,553-576
YJLIYON	475-483	WEITEI	444
YJLIJALE	358	WHIRPOOL	770-774,739
YJLIJANGNAN	359	WUFENG	445-446
YJLIJBEIJING	361-362	XILEN	448-449
YJLIJINDA	481-492	XINGE	462-463
YJLIJASONG	363-366	XINLE	457-460
YJLIJASTAR	360	XINLIB	461
YJLIJANSO	282	XIONDI	862
YJLIJANGLI	368-370	YAOA	467-471,044,013-015
YJLIJELONG	110-119	YIDOG	470
YJLIJIMATAIR	797-800	YORP	776-779
YJLIJONKA	366-367	YU	949
YJLIJOKRIS	804-805	YULTU	484-490
YJLIJOT2_D001	283	ZHOIYI	493-494
YJLIJOT2_D002	284	ZUOIN	495
YJLIJOTY001	285	ZIYI	044,090,092,095
YJLIJOTY002	286	OTHE	496-498,821-828,839-849, 866-877,935-976,999
YJLIJOTY003	287		

Instructions For Use

100

English

UNIVERSAL A/C REMOTE CONTROL

Default Function

Product is available for: GREE (YBOF2), Mitsubishi 388, Midea, Toshiba, Chunlan, Haier, Huailing. If it's not working, please try to operate it with one of the methods below:

Setting Of The Remote Control

Brand point to point fast searching

Switch on the power of the air condition manually, align the remote control with the receiving window of the air condition.

Long press the CODE button until the air condition begins to automatically run with a voice of tick, and then release the button, and the setup is finished.

Button Brand Corresponding Table

ON/OFF	TEMP+	TEMP-	WIND
GREE/HAIER	MIDEA/TOSHIBA/CHANGHONG	SHARP/KELON	MITSUBISHI/OTHERS
MODE	M.SWING	A.SWING	TIME ON
LG/SAMSUNG	HITACHI/PANASONIC	SANYO/HISENSE	CHIGO/DAIKIN
TIME OFF	F.Cool FAST COOLING	F.Heat FAST HEATING	
FUJITSU/CARRIER	CHUNLAN/AUX	SHINCO/AUCMA	

Digital auto searching for the available type

Switch on the power of the air condition manually, align the remote control with the receiving window of the air condition.

Press and hold the "SET" button for 6 seconds until the type code has changed (+1), now it's in the mode of fast searching for the available type. Checking the status of your air condition and press "OK" button to finish the searching when the air condition starts automatically.

Check the function of the buttons whether working or not (except the TEMP+, TEMP-, TIME ON, TIME OFF, SET buttons). Press the "OK" button to finish if there is no problem and the code is effective, if not, press "SET" button to keep on searching.

Input the code manually

Switch on the power of the air condition manually, find out the type of your air condition and the first code from the code table. Take HAIER as an example.

Press and hold the "SET" button for about 3 seconds until the type code is flickering in the window, then press "TEMP+" button until the code you need is on the window and flickering, the air condition will start up if the code is right.

Press "OK" button and then the code of the type will stop flickering.

Check the function of the buttons on the remote control to make sure there is no problem. The setup is finished if there is no problem. If not, repeat the step 2-3.

Searching the code manually

Switch on the power of the air condition manually, align the remote control with the receiving window of the air condition.

Press and hold the "SET" button for about 3 seconds until the type code is flickering in the window, then press "TEMP+" button one time. Checking the status of your air condition and press "OK" button to finish the searching when the air condition starts automatically.

Restore to factory settings

As the "SET" + "WIND" button at the same time and hold about 3 seconds to restore to factory settings.

Some of the remote control have the functions below (refer to the panel of the remote control)

FAST COOLING, FAST HEATING button

Air condition will be set to the cooling mode by pressing the "FAST COOL" button, the temperature is strong wind, automatic direction.

Air condition will be set to the heating mode by pressing the "FAST HEAT" button, the temperature is strong wind, automatic direction.

In the mode of heating, press the "E A Heating" button to start the electrical heating function. This function is suitable for some models.

Set the CLOCK function

As the "CLOCK" button (about 3 seconds) in the mode of clock setting and then the clock is being, adjust the time by pressing the "TEMP+" button and the "TEMP-" button. Press the "CLOCK" on again to exit.

TIME ON/OFF function

Apped with the original remote control timing function, the timing indicator light of the air condition will light up after pressing the "TIME ON" or "TIME OFF" button, and it means that the air condition is working in timing status.

Combination code has no timing function when it is switched on, please find the appropriate type according to the set method (one of the A B C D) in the instruction Manual.

The TIME ON function of some types is only available in the shutdown mode.