



⚠ This product does not apply inverter A.C

- Avoid strong light before IR receiver
- The common pins of swing socket are 12V output.
The common pin of step motor should be inserted into one of the common pins of swing socket. If the direction of step motor is wrong, insert the common pin of step motor to other common pin of swing socket.